


ATENCIÓN: Schuller recomienda que utilice los balancines suministrados en la instalación de esta lámpara de techo.

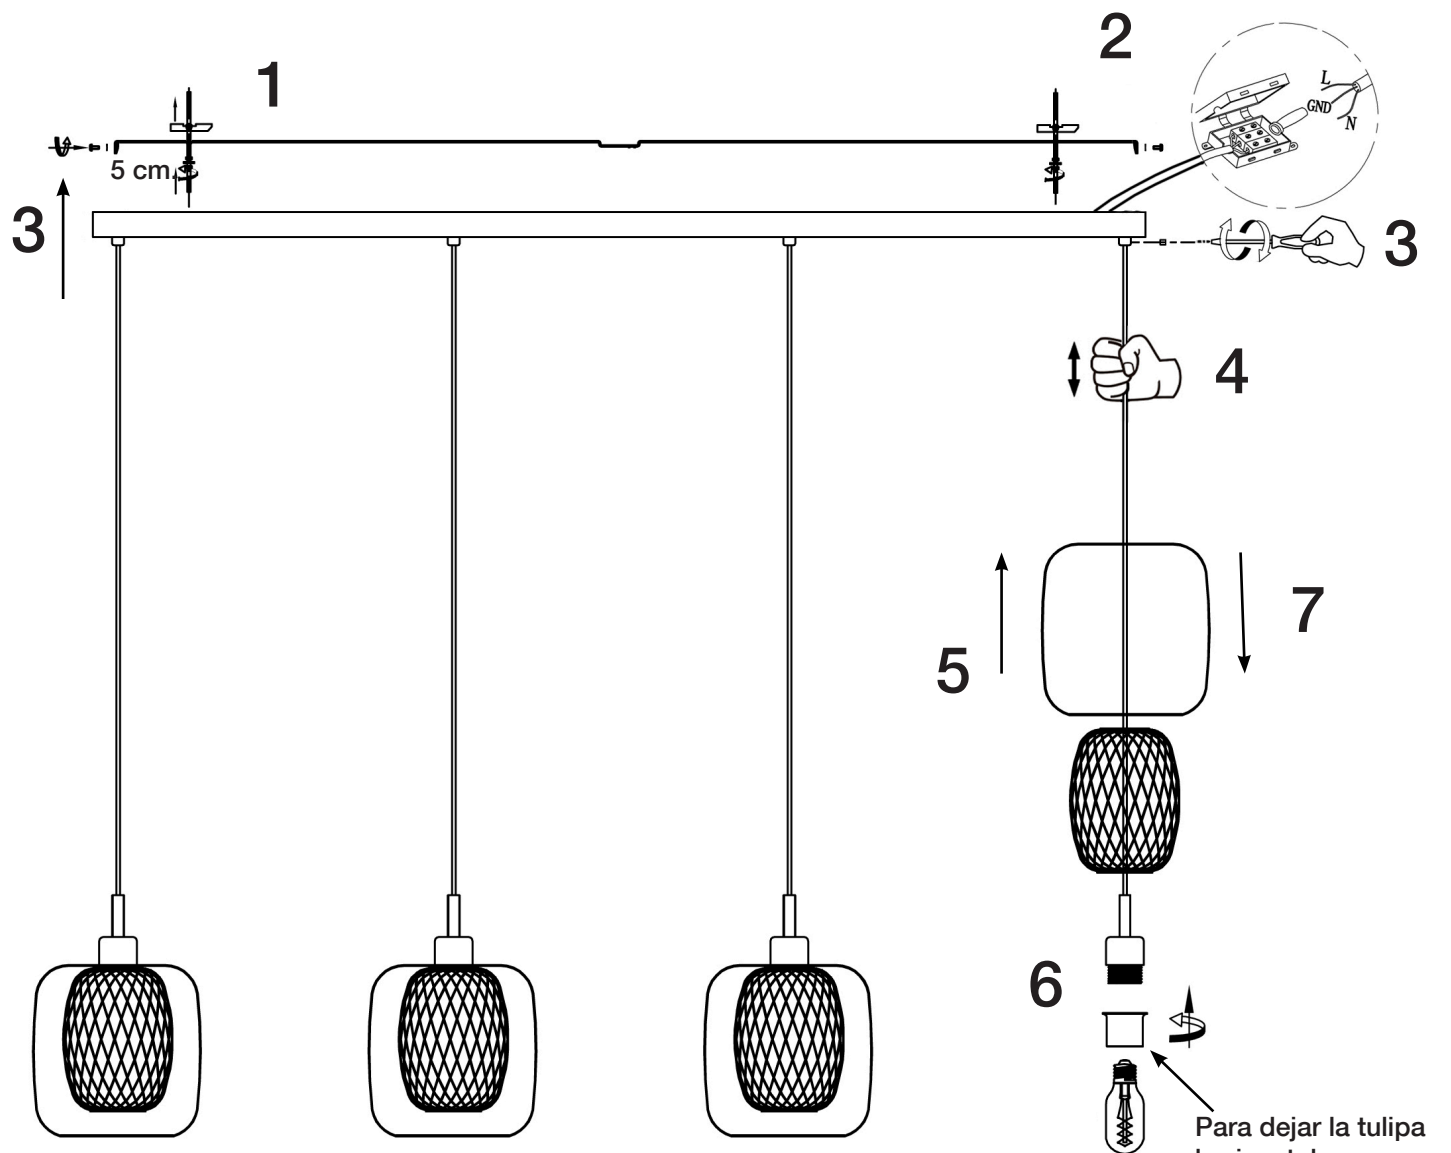

Colocar las tulipas con la lámpara fijada al techo.

LA FABRICACIÓN ARTESANAL DE ESTA TULIPA DE CRISTAL PERMITE LIGERAS IMPERFECCIONES ACEPTADAS POR NUESTRO CONTROL DE CALIDAD.

ATENCIÓN: Este producto incluye bombillas led dimables, un receptor y un mando a distancia por radiofrecuencia.



Bombilla adicional de repuesto. Schuller garantiza su disponibilidad hasta 5 años desde la fecha de compra, podrá solicitarla con nuestra ref. 5031

Para ver la ficha técnica de producto completa, puede usar el siguiente código QR:



Para cualquier duda técnica póngase en contacto con nuestro Departamento Técnico. Estamos a su servicio en nuestro email mperez@schuller.es o en nuestro teléfono 961 601 051

Rev.03.26




Schuller®

600637
TRIAC DIMMER


INSTALACIÓN 1

Simplificada dentro del florón

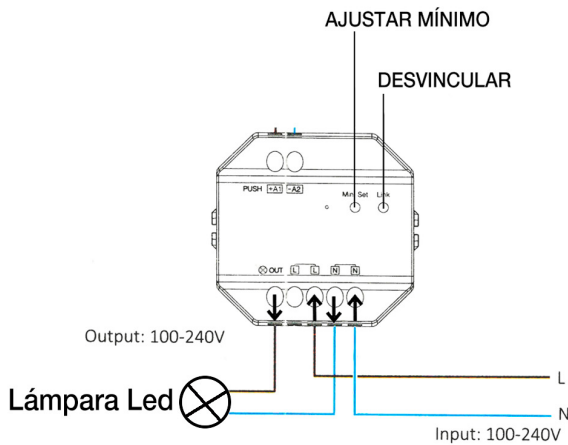


INSTALACIÓN 2

Dimado a través de pulsador dentro del florón

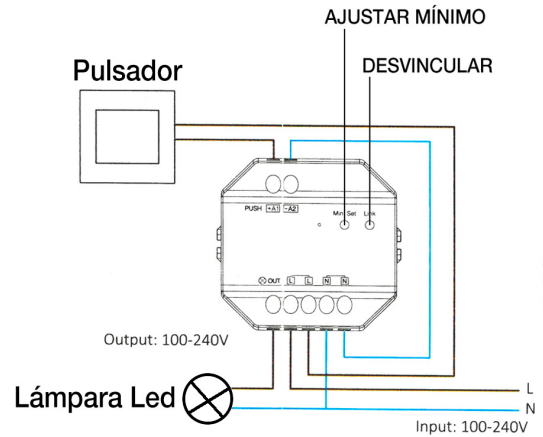

Schuller®

600620 MANDO A DISTANCIA.
INSTRUCCIONES DE MANEJO.

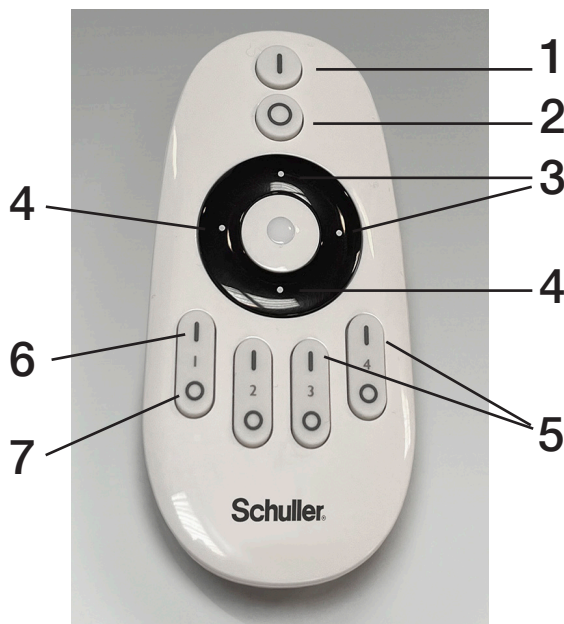


1. Encendido general.
2. Apagado general
3. Aumentar la luminosidad progresivamente.
4. Reducir la luminosidad progresivamente.
5. 4 Canales. Una vez encendida la lámpara y antes de 5 segundos. elegir canal y mantener pulsado el botón (1, 2, 3 ó 4). El parpadeo indicará que se ha guardado el ajuste de luz en el botón (canal) pulsado.
6. Encendido selectivo. (Sólo enciende el canal pulsado)
7. Apagado selectivo. (Sólo apaga el canal pulsado)

NOTA: Para borrado general de canales, pulsar hasta el parpadeo el botón UNLINK del dimmer instalado.

Para cualquier duda técnica póngase en contacto con nuestro Departamento Técnico.
Estamos a su servicio en nuestro email mperez@schuller.es o en nuestro teléfono 961 601 051

ATTENTION: Schuller recommends to use included special screws when installing this lamp.

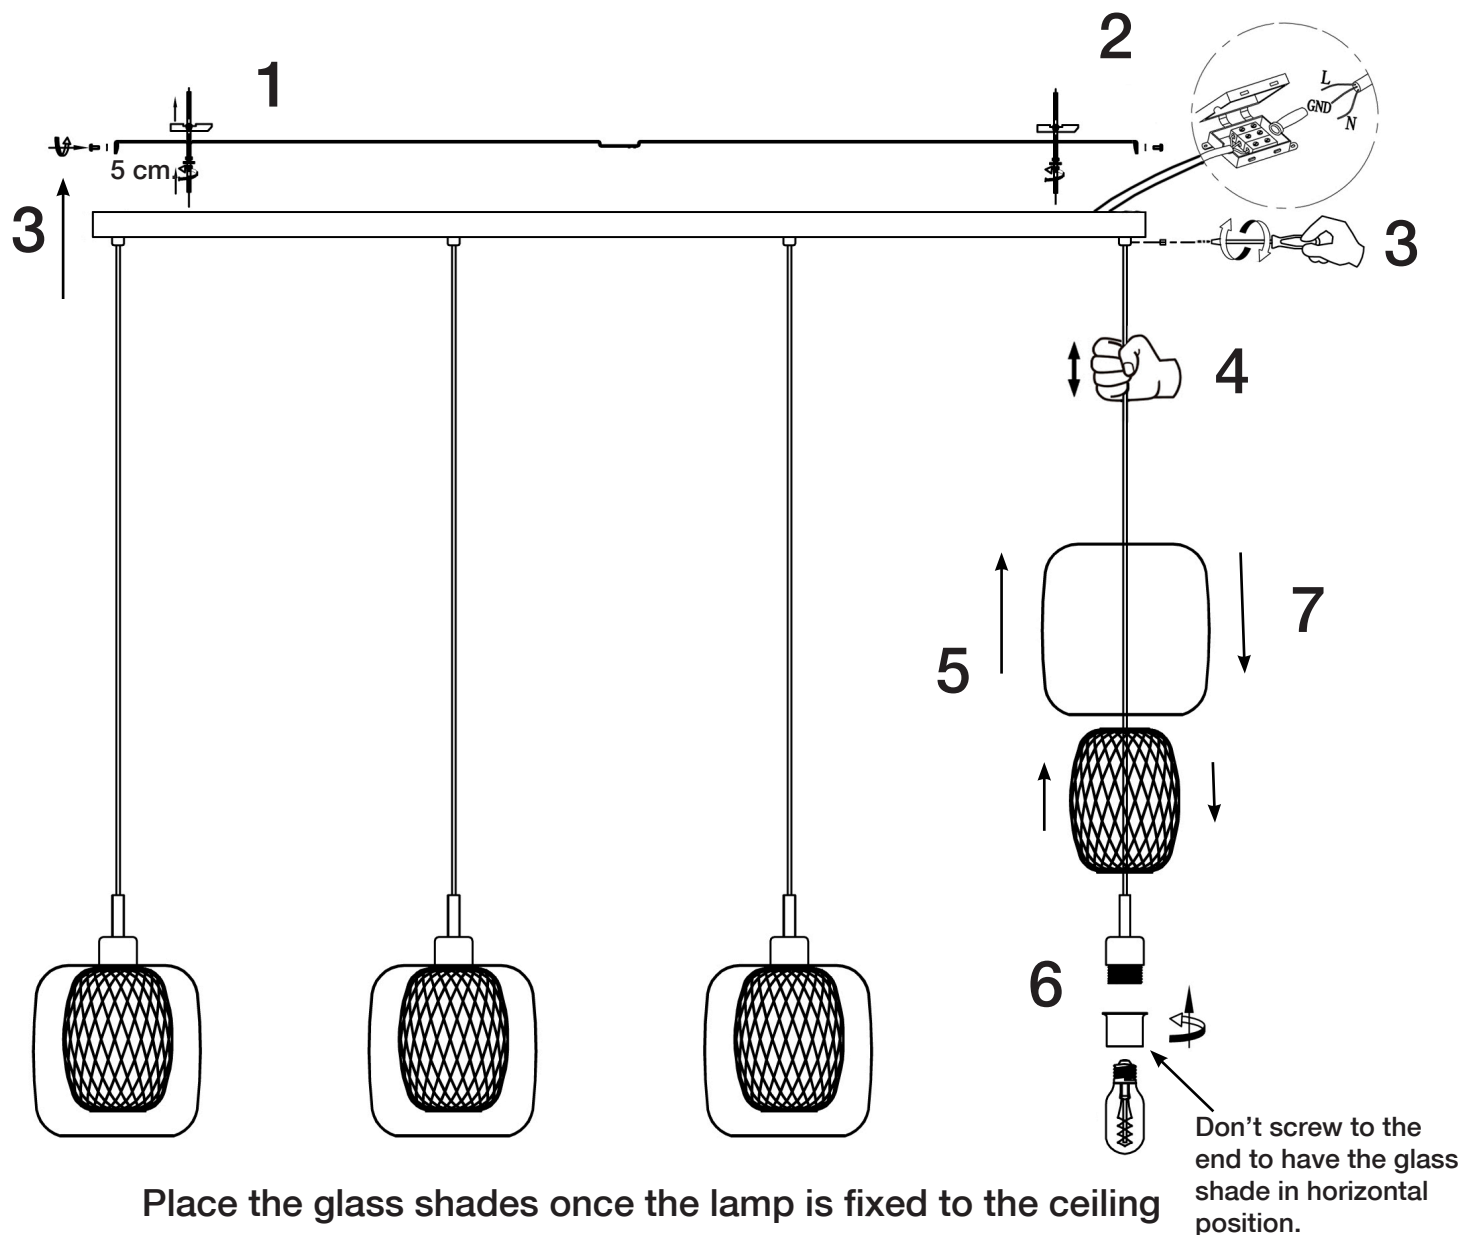

**CRAFTMAN PRODUCTION FOR THIS GLASS SHADE
 ALLOWS SMALL IMPERFECTIONS CHECKED BY OUR
 QUALITY CONTROL**

ATTENTION: This product includes dimmable led, a receiver and radio frequency remote control.



An additional spare light bulb. Schuller guarantees its availability for at least 5 years since date of purchase, you may order it using our reference code 5031

You may use the following QR code to view the complete technical data sheet of the product:



If you have any technical questions, please do not hesitate to contact our technical Department.
 We are at your disposal in our email: export@schuller.es




Schuller®

600637
TRIAC DIMMER


INSTALATION 1

Simplified. Inside the canopy.

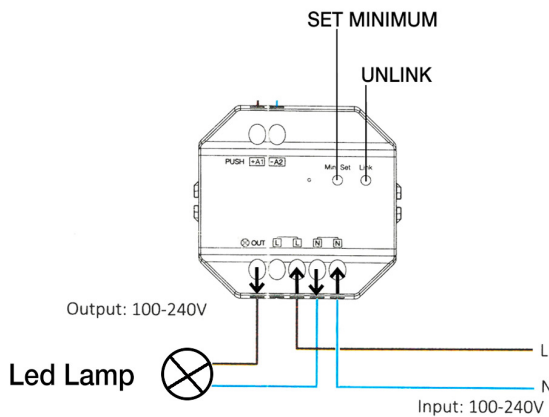


INSTALATION 2

Dimmed by push button. Inside the canopy.

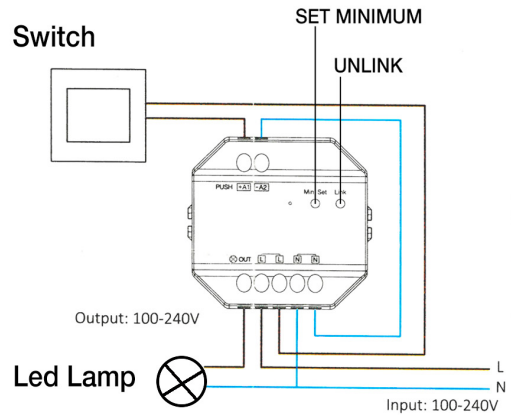

Schuller®

600620 REMOTE CONTROL.
OPERATING INSTRUCTIONS.

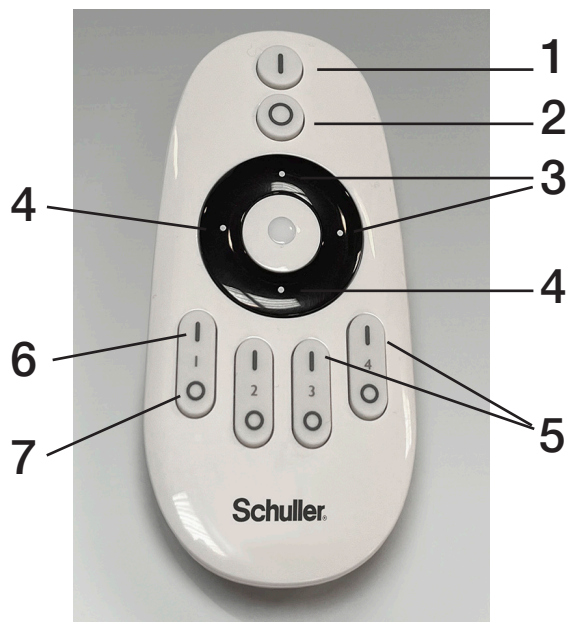

1. General switch on.
2. General switch off.
3. Increase brightness gradually.
4. Reduce brightness gradually.
5. 4 channels. Once the lamp is switched on and within 5 seconds, select a channel and press and hold the button (1, 2, 3 or 4). The flashing light indicates that the light setting has been saved to the button (channel) pressed.
6. Selective switch-on. (Only switches on the pressed channel)
7. Selective switch-off. (Only switches off the pressed channel)

NOTE: To delete all channels, press and hold the UN-LINK button on the installed dimmer until it flashes.

If you have any technical questions, please do not hesitate to contact our technical Department.
We are at your disposal in our email: export@schuller.es